

# ABC

## CALIBRATION SHEETS

Please note: When printing the calibration sheets A, B and C, you have to choose actual size and not scale to fit page in print settings.

If you do not print in actual size the performed measurements will not be correct.

On page 5, you can find a metric and imperial ruler to verify the accuracy of your calibration.

[tagarno.com/ download-calibration-sheets-abc](http://tagarno.com/download-calibration-sheets-abc)



A


Range to cover: 204 - 340 mm

Dot diameter: 6,809 mm

Spacing: 16,681 mm

N° dots X: 17

N° dots Y: 10

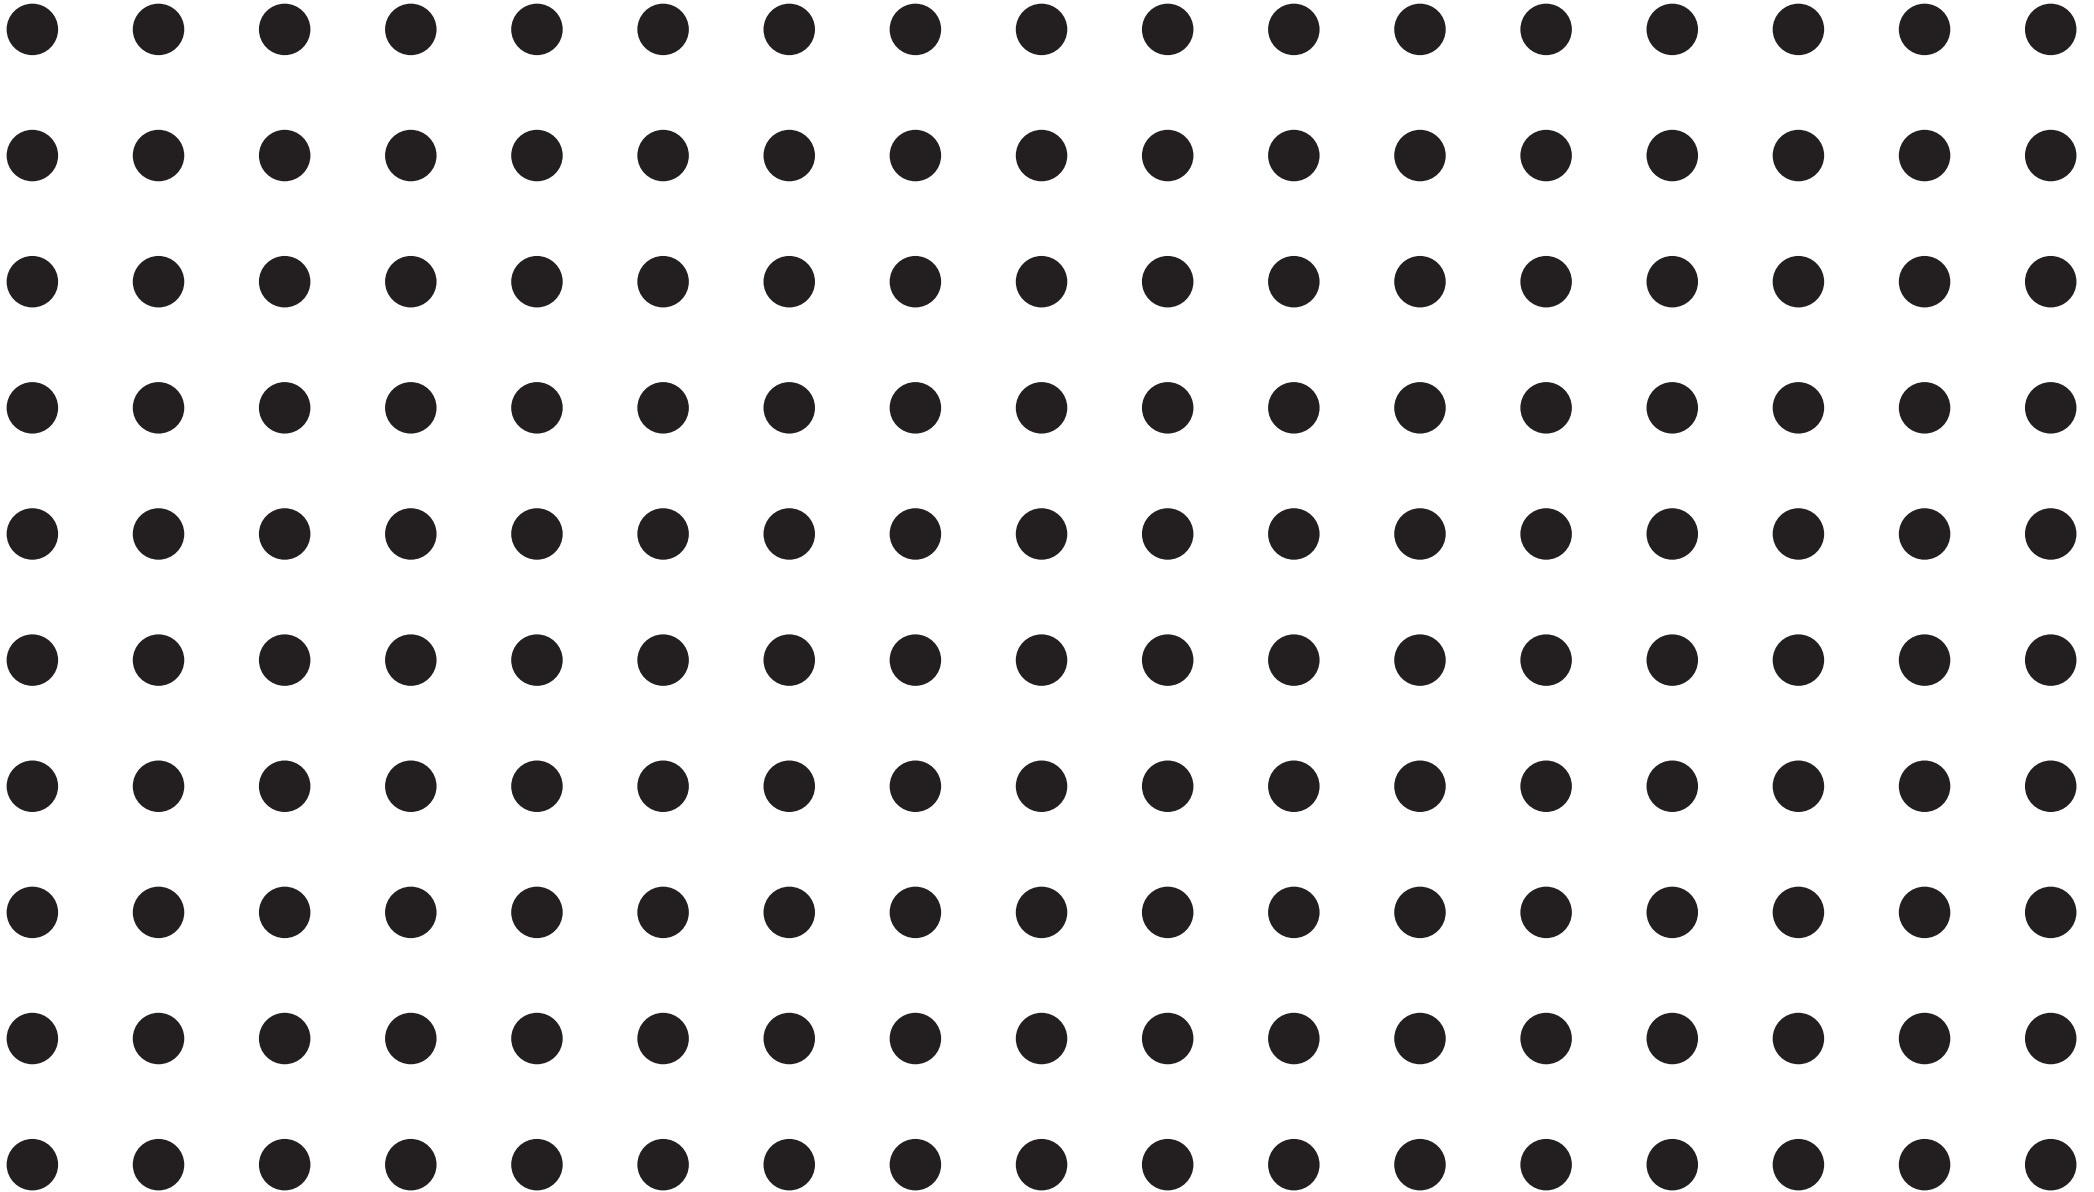

B


Range to cover: 123 - 204 mm

Dot diameter: 4,085 mm

Spacing: 10,009 mm


N° dots X: 20

N° dots Y: 11

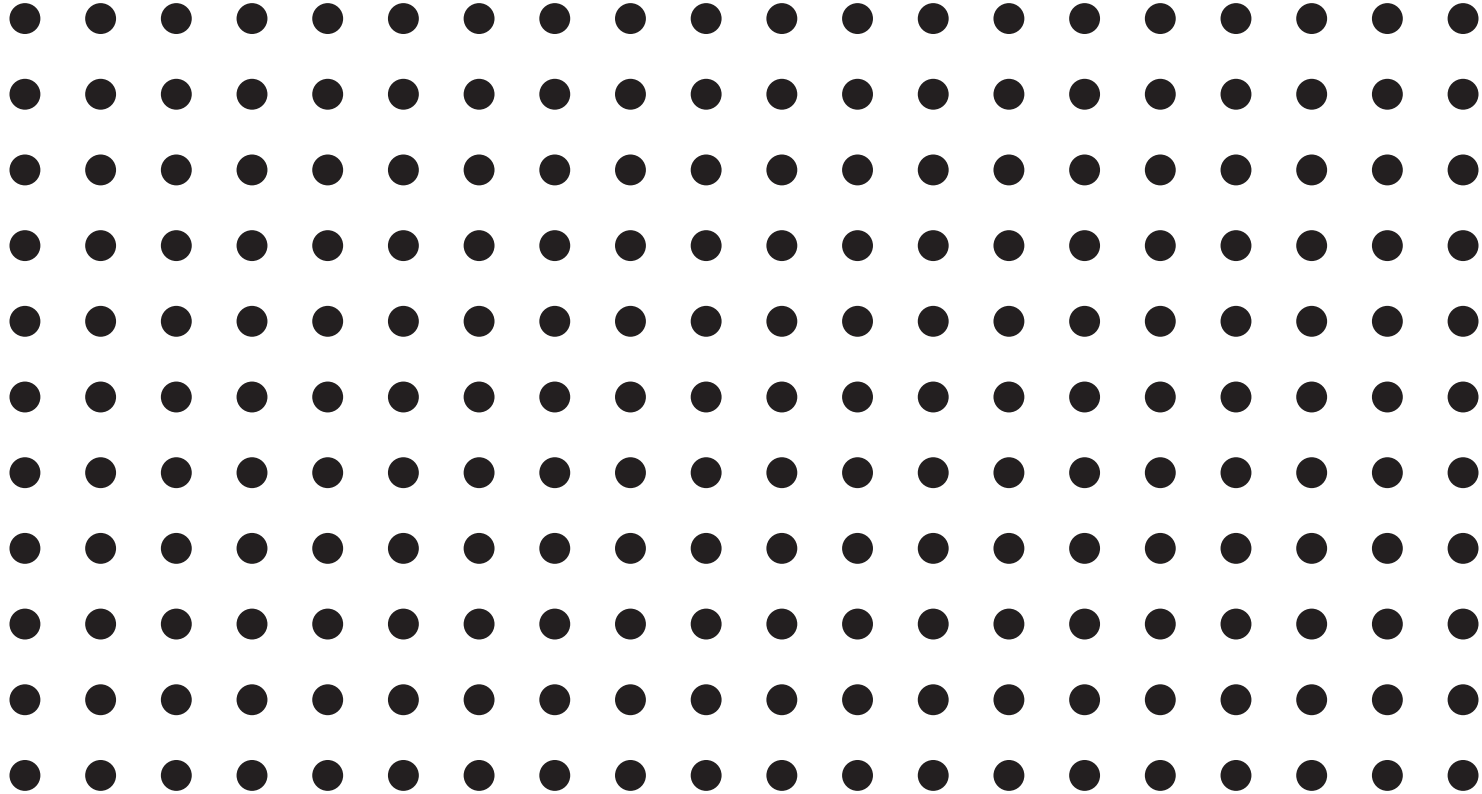




Range to cover: 74 - 123 mm  
Dot diameter: 2,451 mm  
Spacing: 6,005 mm  
N° dots X: 20  
N° dots Y: 11

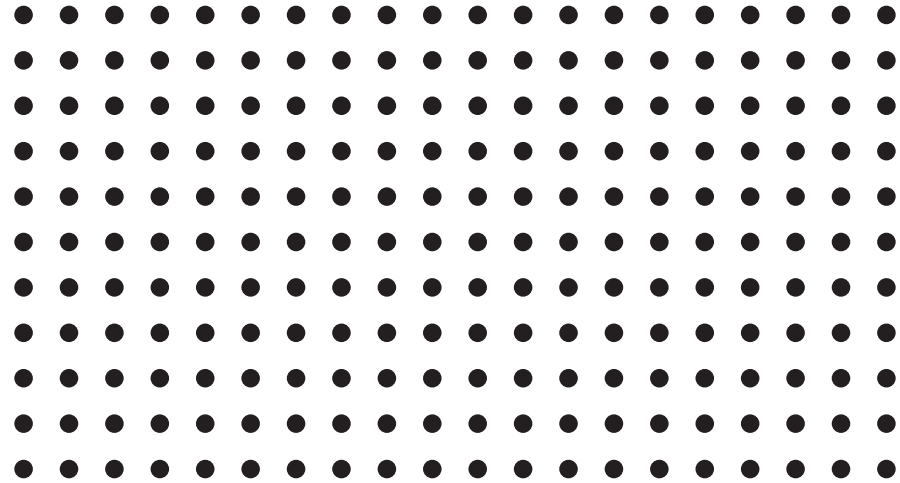

15 cm ruler

Usage: Verify calibration when  
using metric system units

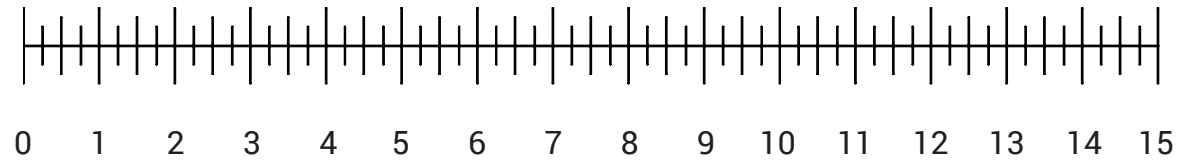

6 inch ruler

Usage: Verify calibration when  
using imperial system units

